DENON®

Quick Setup Guide

Network Receiver

DRA-100

Start Here Starten Sie hier Commencez ici Iniziare qui Iniciar aquí Begin hier Starta här Начните здесь Zacznij tutaj

Before you begin

What's In The Box



Required For Setup





```
Network router
```





Speaker cables

Optional



iOS device and USB cable







Network cable

- For more information, visit www.denon.com
- · Refer to the enclosed CD-ROM manual or Online Manual for other functions information and operation procedure details.

manuals.denon.com/DRA100/EU/EN/



1. Connection



Italiano Español Nederlands Svenska Pycoxuŭ

English

Deutsch

Français

Polski

2. Connecting to your home network

Choose from one of the following options





3. Enjoying your music!

Enjoying Internet radio





Enjoying music using Apple AirPlay

Open Control Center (iOS 7 and later) by swiping up from the bottom of your screen, then tap ▲



Select the "Denon DRA-100" from the AirPlay Device list and start playing your music

Select a station

Search Stations

Location Name

2

2



Note: Make sure your iOS device is on the same network as the DRA-100

Download the Denon "Hi-Fi Remote" app

Scan the QR code to download and install the Denon "Hi-Fi Remote" app using your smartphone and a scanning app or manually search the Apple App store or Google Play store for the "Denon Hi-Fi Remote"



Enjoying music using Bluetooth

1

Press the source button to select Bluetooth, then press and hold the Source button until [Pairing Mode] is displayed



3

Select "Denon DRA-100" from the Bluetooth device list on your mobile device

Some devices may required you to verify the numeric code and press ENTER on the DRA-100



To reconnect a previously paired Bluetooth device, start at step 2.

Activate Bluetooth on your 2 mobile device



Play music using any app on
vour device



Pair and connect your NFC capable device by gently touching it on the NFC logo on the front of DRA-100

Basic trouble shooting

No sound:

- · Check all connections.
- . Make sure the bare metal wire ends of the speaker wires are in contact with the metal part of the speaker terminals.

Online Manual

4

N

For more information about this product, scan the QR code using your mobile device or visit Denon Support at: http://manuals.denon.com/DRA100/EU/EN/index.php



English

Deutsch

Русский



DENON

denon.com

D&M Holdings Inc, Printed in China. 5411 11327 00AD